




CAPTURE BOARD

USER GUIDE FOR MODEL DB-601

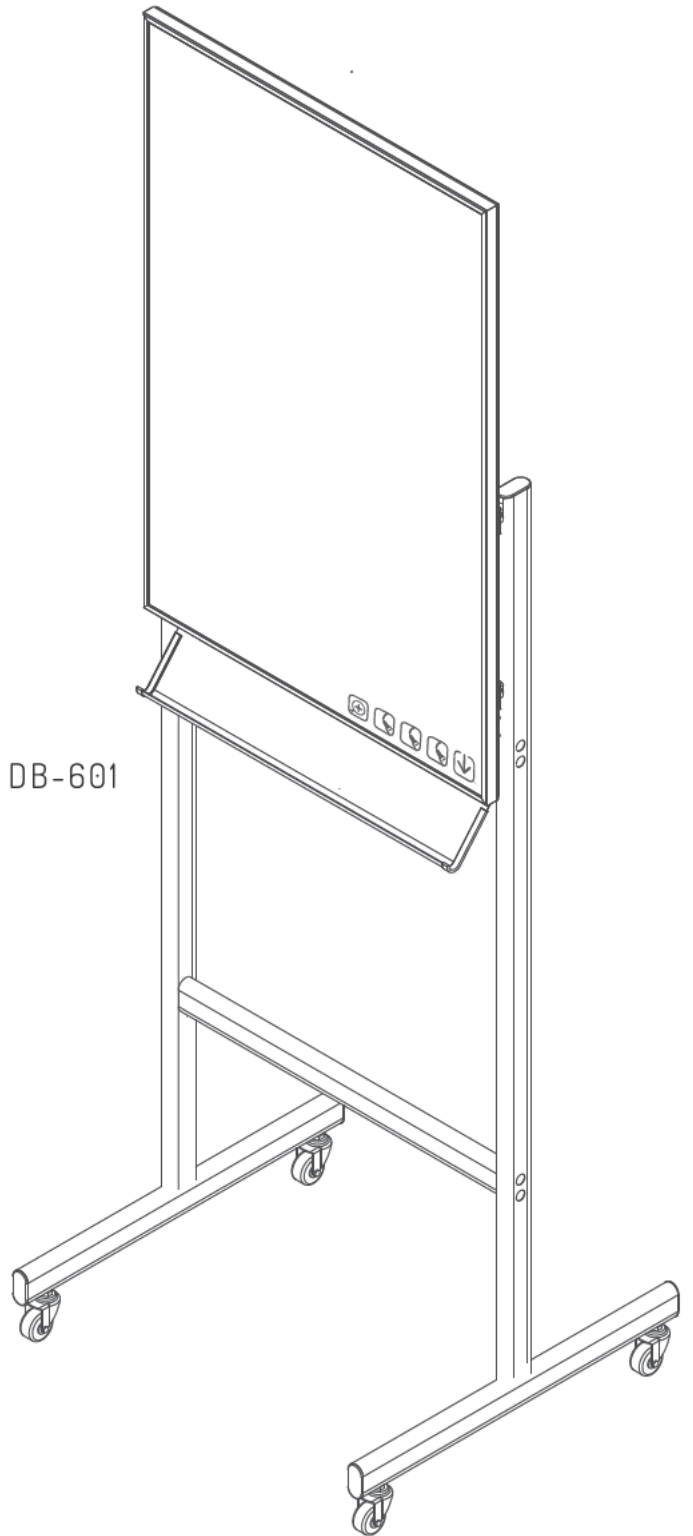

Dr. Board[®]

REMINDER

Please read carefully and follow the instruction from this User Manual before install and use this product.

SAFETY LEVEL



WARNING

Indicates a potential hazard that could result in serious injury or death and/or property damage.



CAUTION

Indicates hazards that could result in minor or moderate injury and/or property damage.

SAFETY INSTRUCTION

This product has been designed and intended for use indoor via a USB cable or wireless USB receiver connected to a desktop or laptop computer. Use this product in an outdoor and/or wet environment could damage this product and create a potentially unsafe operating condition.

- Do not use this product in an outdoor and/or wet environment. Electric shock will result.
- This product is not intended for unsupervised children. Always provide adult supervision when children are using the product.
- Installation and removal procedure should be performed by adult only. Failure to do so could result in personal injury and/or product damage.
- Unplug the device immediately when the product emits smoke, excessive heat, abnormal smell or unusual noise. Contact the authorized service representative for inspection to avoid possible fire hazard or electric shock.
- Unplug the device immediately if any metal or liquids get into the product. Contact the authorized service representative for inspection to avoid possible fire hazard or electric shock.
- Never disassemble or open the cover that is fastening with screws. Uncovered components may cause product damage or electric shock.
- Do not alter this product or modify any parts. It may cause fire or electric shock. Clean this product by dry soft fabric, unplug the USB cable before clean it.
- Keep the product and accessories away from any possibility to be step on. Failure to do so may cause injury and product damage.
- This product is suitable to work under: Temperature: 15°C to 40°C; Humidity: 15% to 75%; NO condensation. Over this range may lower the product performance.
- Unplug the USB cable when:
 - The USB cable is damaged.
 - A liquid is spilled onto this product.
 - This product fall or its cover is damaged.
- This product must be disposed in accordance with the relevant federal, state, and local laws and regulations.
- When this product is not used over an extended period of time, unplug the USB cable. If this product is fallen down or damaged, turn off the device and unplug the power supply. Failure to do so may cause fire or electric shock.
- Remove the batteries from the ultrasonic stylus when it is not used over an extended period of time. Failure to do so may cause the batteries to leak.
- Do not install this product where it may be exposed to sunlight, strong direct lighting, heating equipment, or direct wind blow.
- Do not install this product in locations where the temperature may change suddenly.
- Wire USB connection is recommended.
- Writing surface's flatness, material and size should be considered before installation.

CHAPTER 1

HARDWARE ASSEMBLY

PART LIST	1.1
PRODUCT ASSEMBLY	1.1-1.3
PRODUCT DETAIL	1.3

CHAPTER 2

USING CAPTURE BOARD



SOFTWARE/HARDWARE SET UP	2.1
SOFTWARE FUNTION	2.2
ACCOUNT SIGN IN	2.3
SHARING MEETING ROOM	2.4
JOIN IN MEETING	2.5

CHAPTER 3

TROUBLESHOOTING


FORGET ACCOUNT/PASSWORD	3.1
OUT-DATED SOFTWARE	
PCBA REPLACEMENT	
NEW PEN/ERASER	
BOARD SURFACE MAINTENANCE	
INTERNET CONNECTION	

More info and software update at www.drboard.com.tw


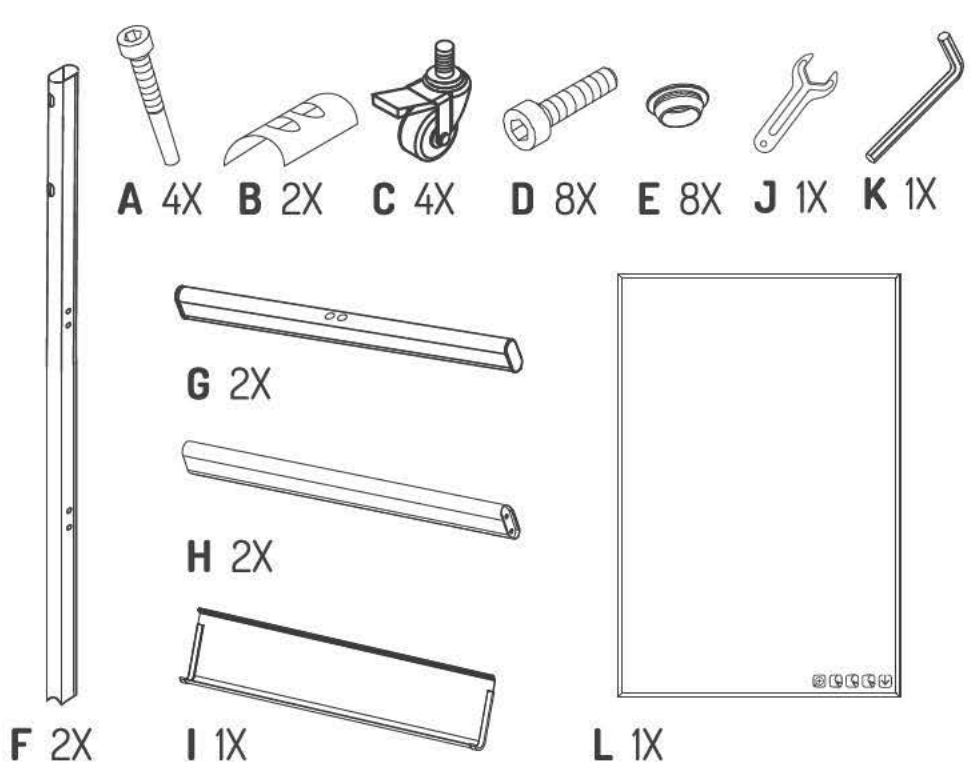
PART	ACCESSORY
 <p>A 4X B 2X C 4X D 8X E 8X J 1X K 1X</p> <p>G 2X</p> <p>H 2X</p> <p>F 2X I 1X L 1X</p>	 <p>Cap Eraser 1X</p> <p>Cap Marker 3X</p> <p>Flash Driver 1X</p> <p>USB CABLE 1X</p>

PRODUCT ASSEMBLY


1

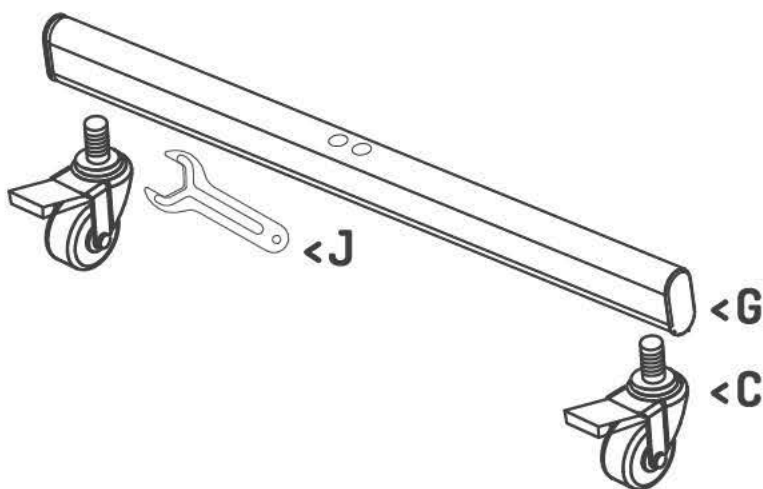


2

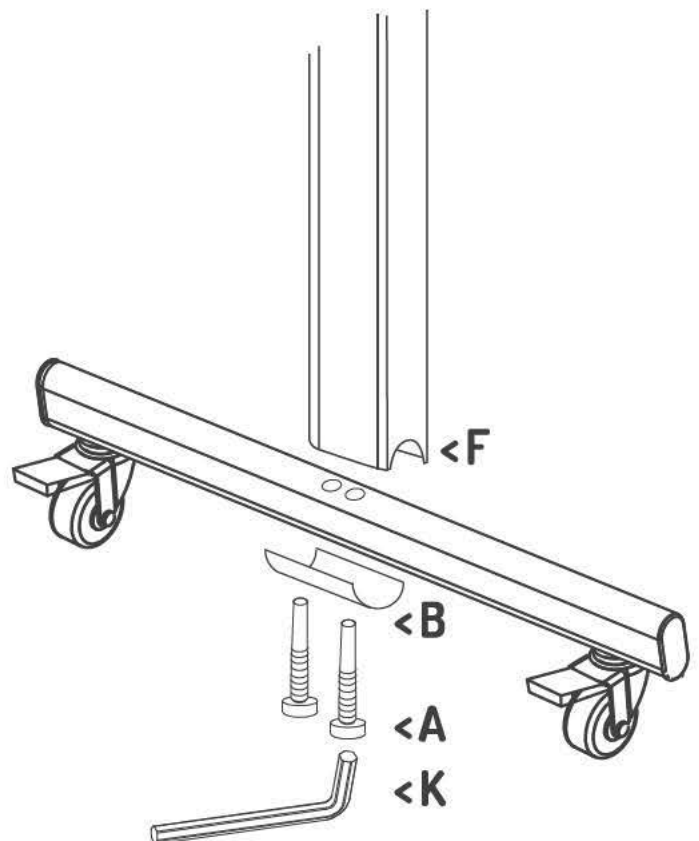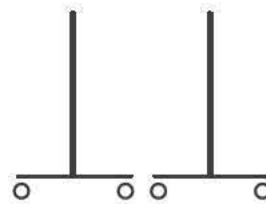



3

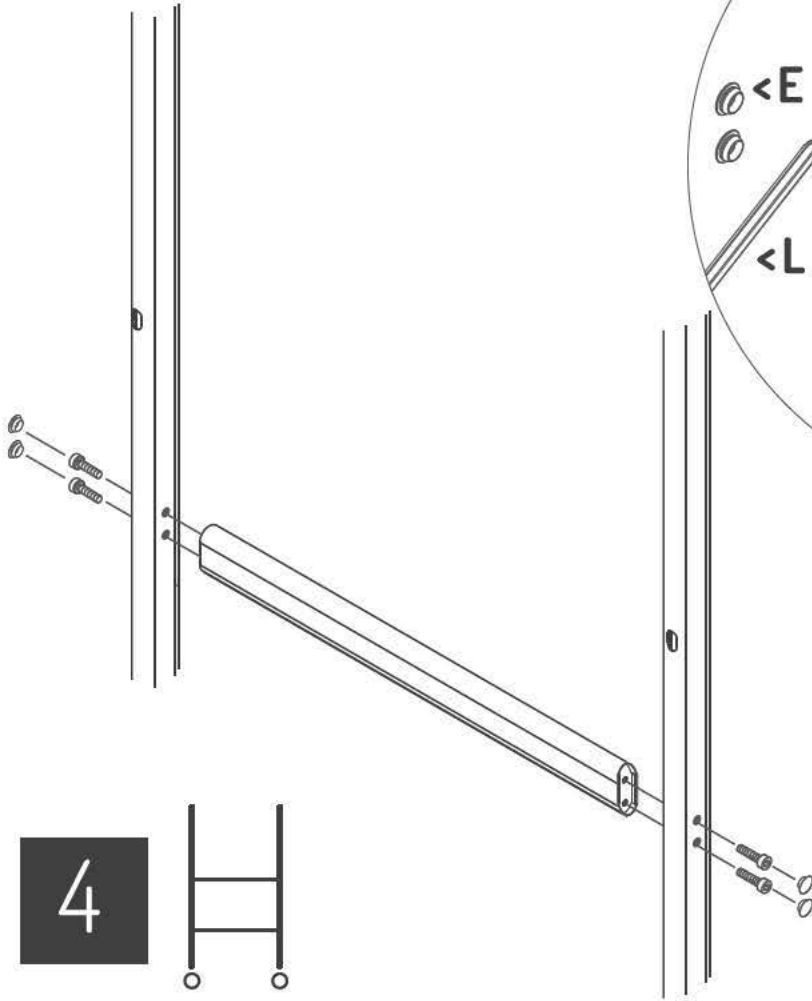


4

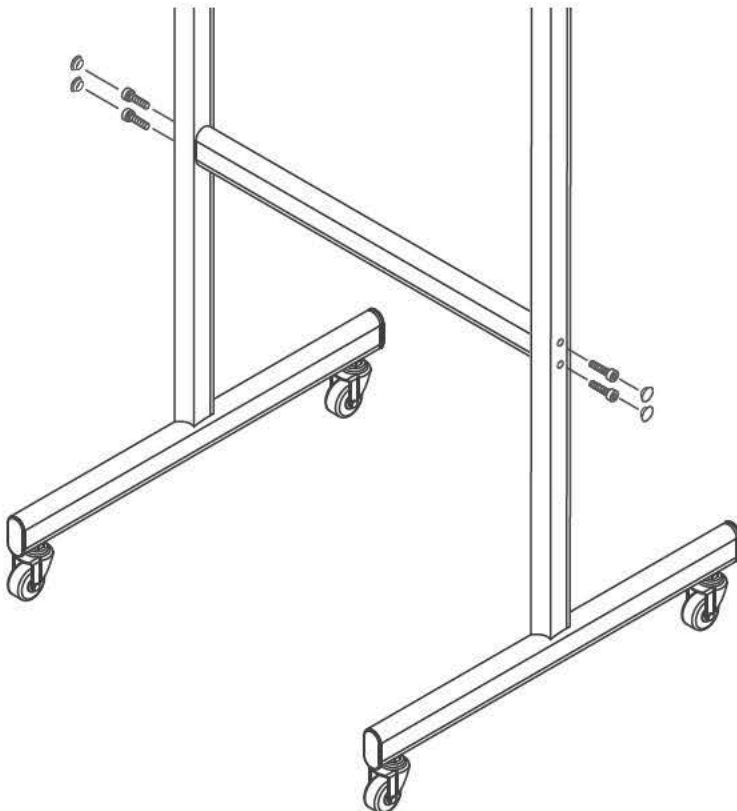

5

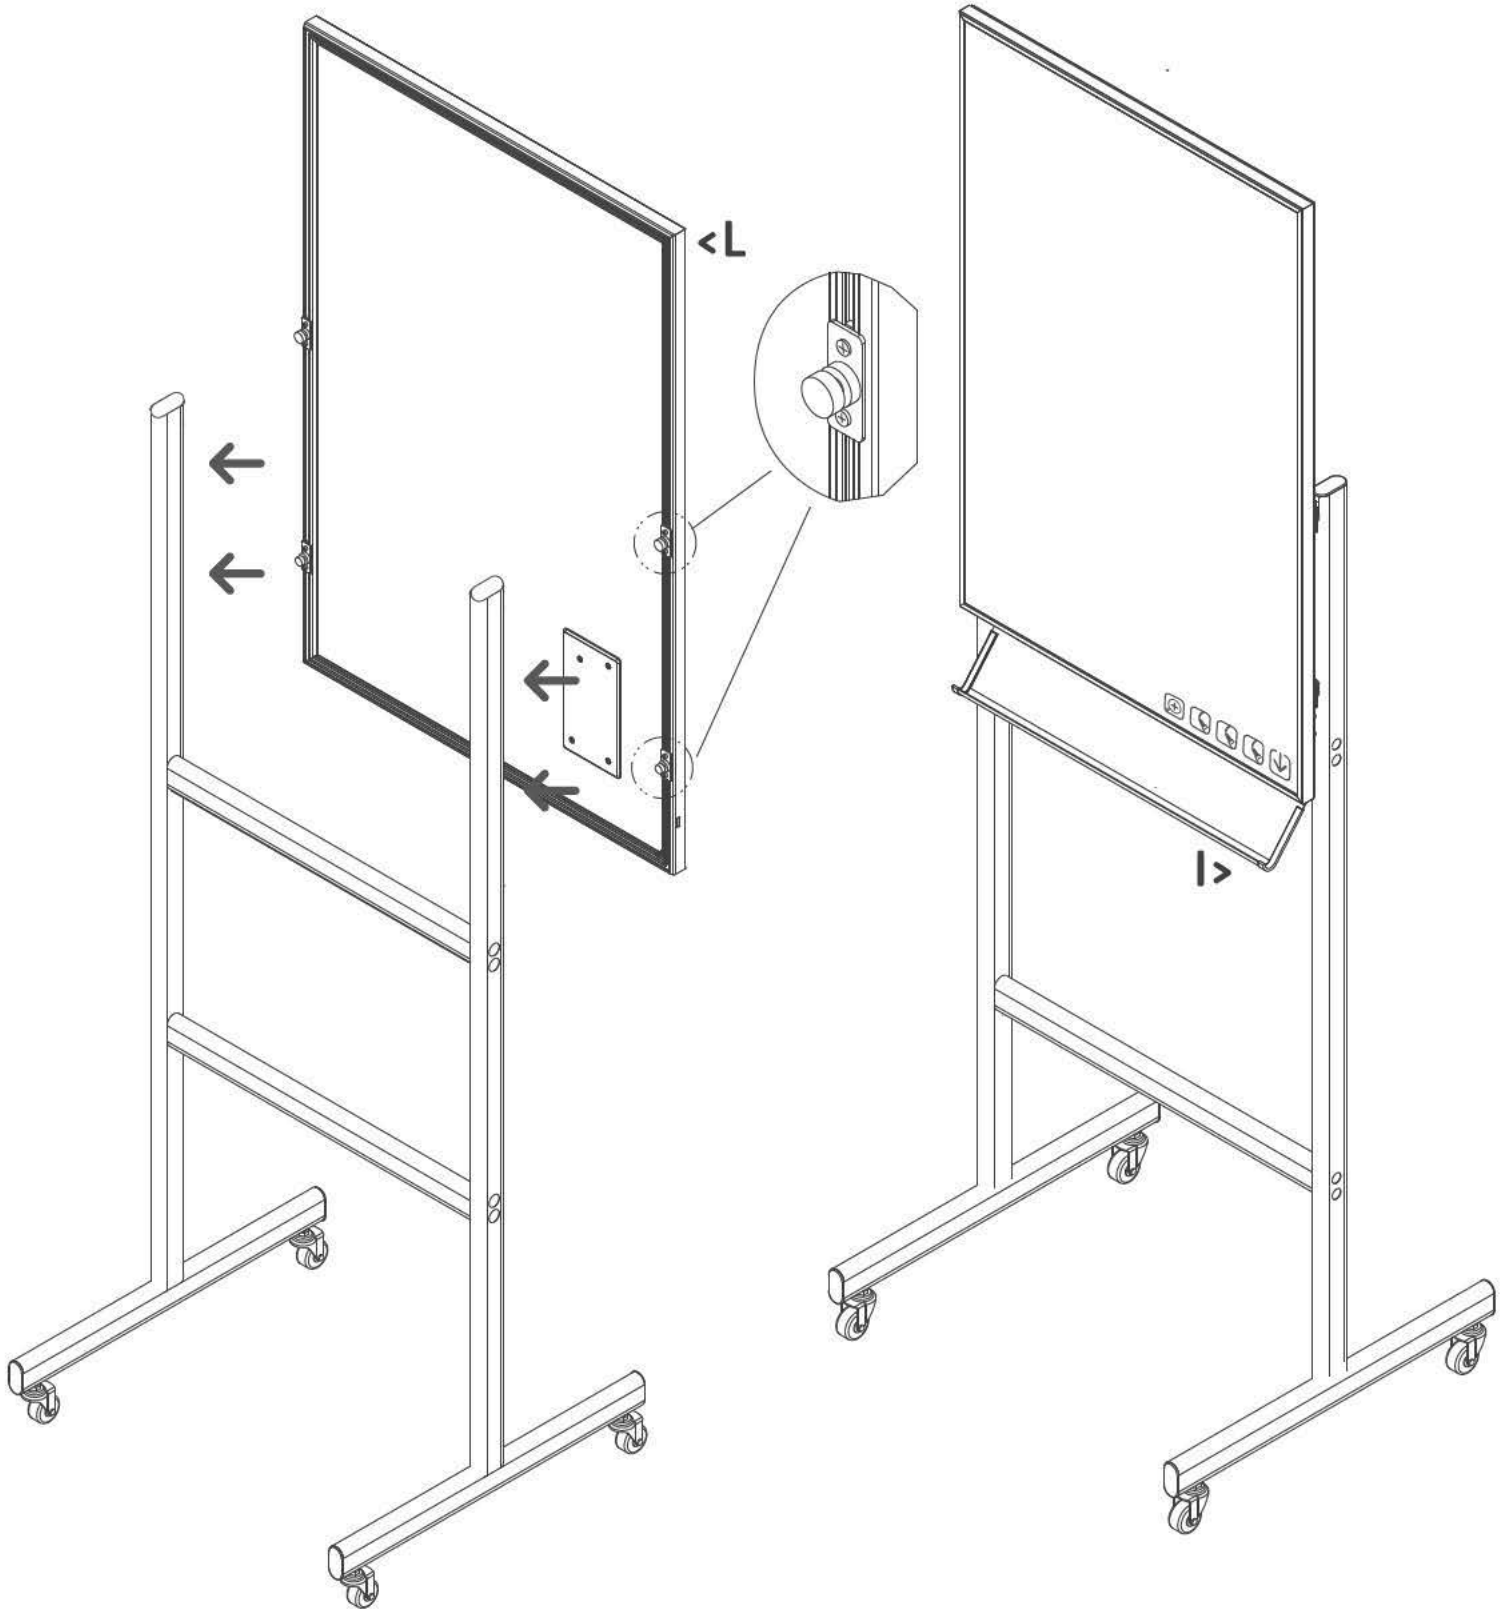 


PRODUCT DETAIL

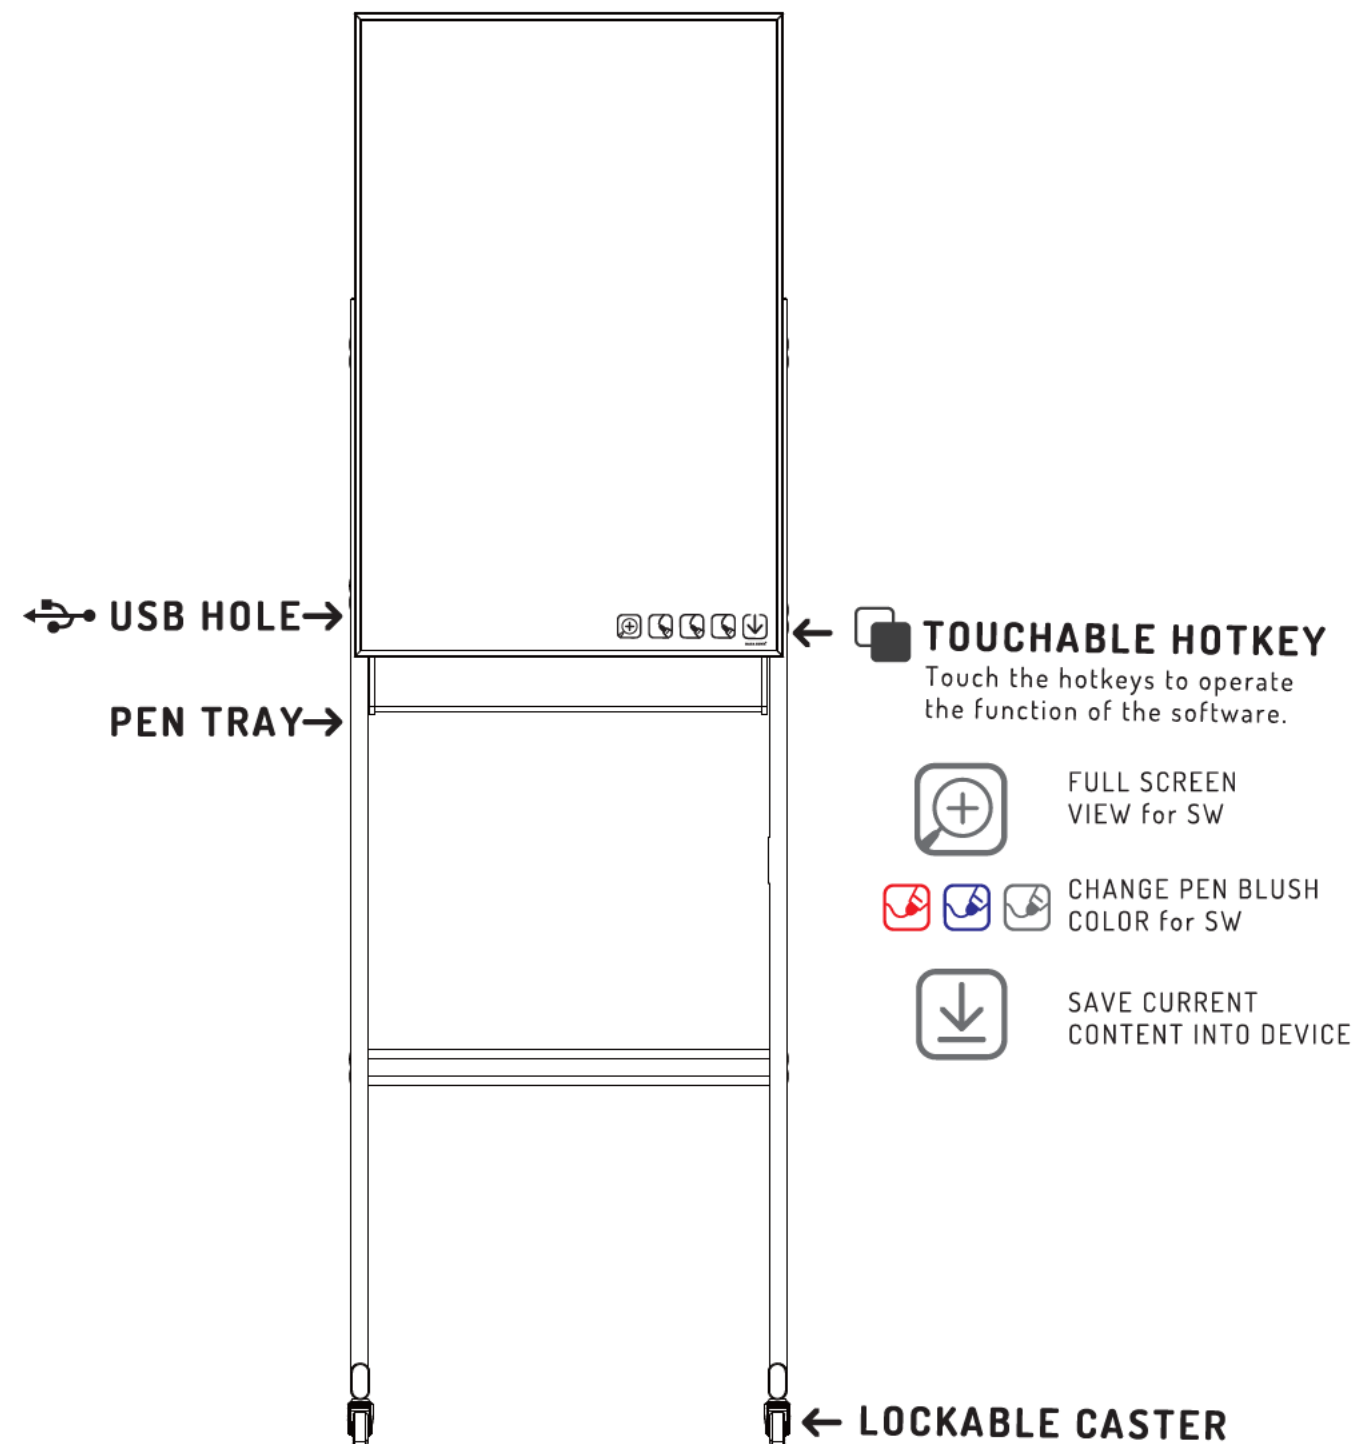

SET UP

HARDWARE SET UP



Insert USB connector to computer and Capture Board.

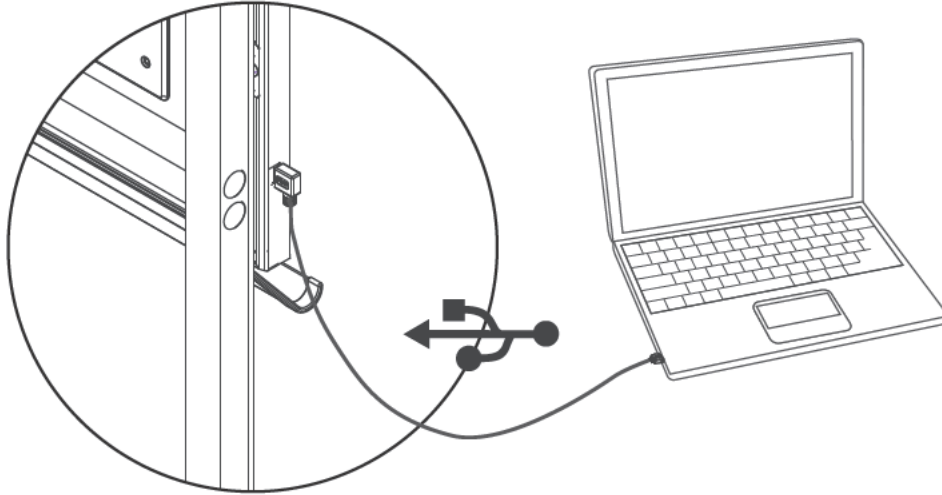


SOFTWARE SET UP

SOFTWARE INSTALLATION ON LAPTOP/PC

Installing the CapNote software from the flash drive provided and then start the Capture Board app. Checking if the icon at top right corner becomes green.

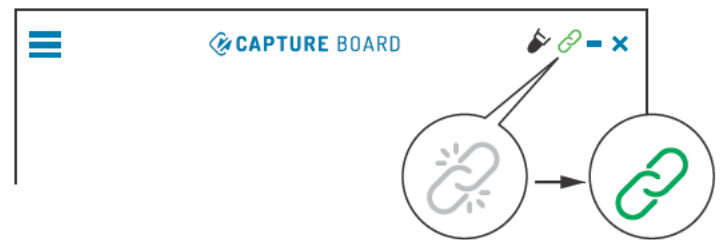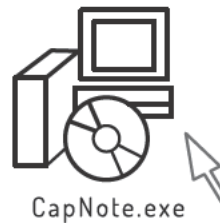


APP INSTALLATION ON SMART DEVICE

Search and install  **Capture Board** app through
▶ Google Play or ▶ App Store.
Please use the Account information provided to sign in.




Available on Windows,
Android and iOS system

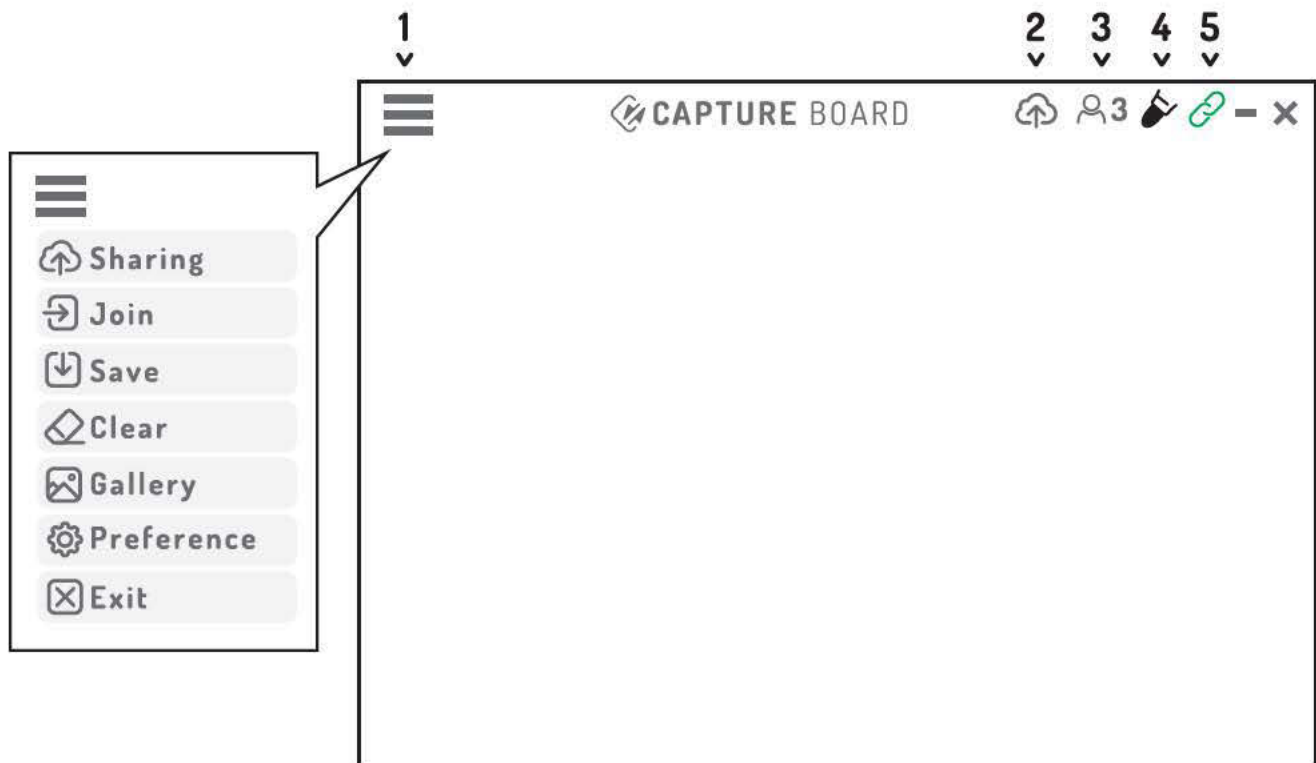

- | | |
|--------------------------|---|
| 1 Tool Bar | |
| Sharing | Start up meeting room |
| Join | Join in meeting room |
| Save | Save current content into specified path |
| Clear | Clear the page |
| Gallery | |
| Preference | Account Setting |
| Exit | Leave the Capture Board |
| 2 Server Account | Connected to Capture Board |
| 3 Members in room | How many people join in room |
| 4 Pen Brush Color | Touching the icons on Capture Board to change color of brush. |
| 5 Connection Mode | Disconnected/ Connected |

GALLERY

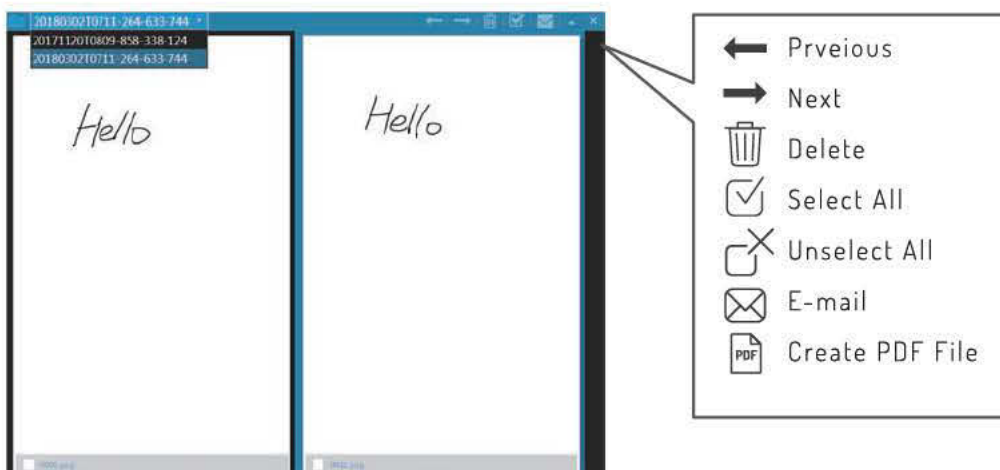

SIGN IN ON LAP TOP/PC

Open the file Capture Board Account.pdf, and type in the account information provided to sign in.

There are two types of account.

Server Account for sharing meeting room

The Server Account can only be used to sign in with the computer that has the usb connection with the Capture Board.

Client Account for join the meeting room list


Each Client Account can be used to log on with different smart devices on the same time.

***Do not mix server account and user account in case of any unpredictable error occur.**

ON LAPTOP/PC





ON SMART DEVICE

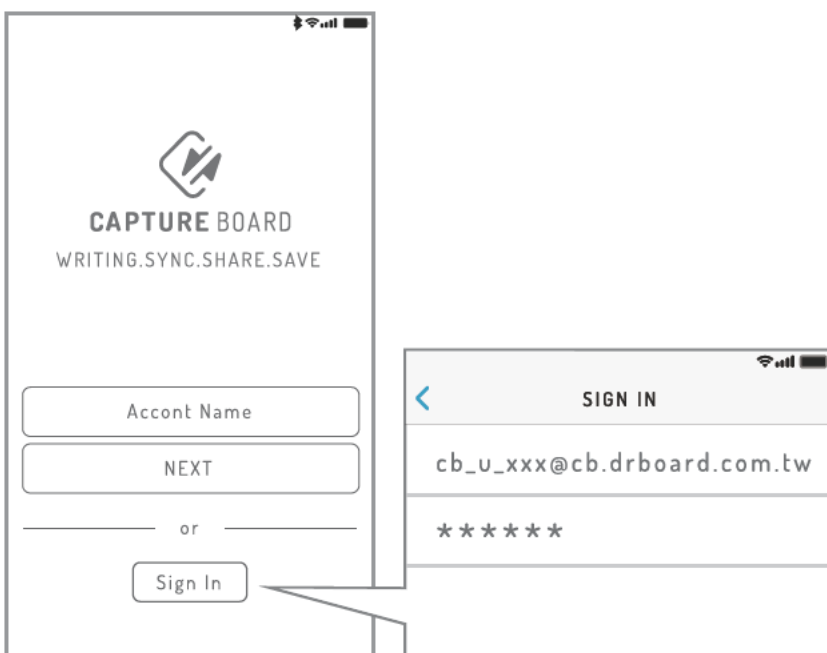





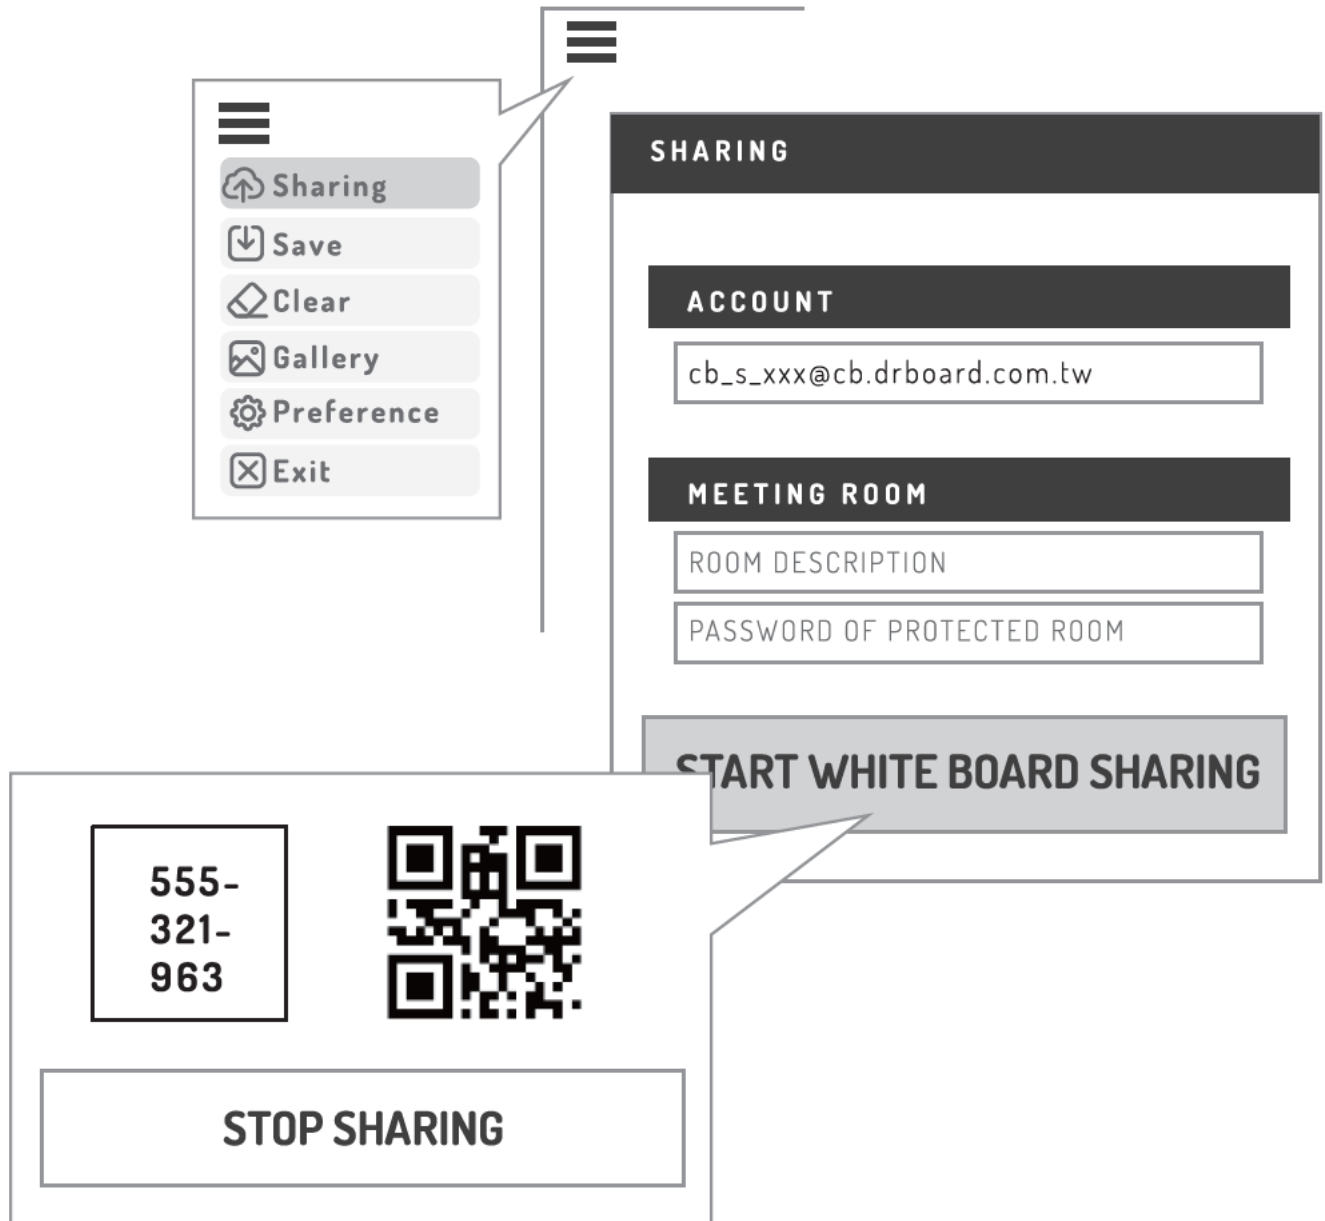

SHARING

Type in the room description and assigning a meeting room password in case of a password protected meeting and start white board sharing. A new meeting room ID will automatically be generated .





-  Sharing
-  Save
-  Clear
-  Gallery
-  Preference
-  Exit


SHARING

ACCOUNT

MEETING ROOM

START WHITE BOARD SHARING

555-
321-
963



STOP SHARING

555-
321-
963

Meeting Room ID- for PC/Laptop

When creating meeting room, a new ID will automatically be generated for the purpose of differentiating different meeting room.



The QR Code of Meeting Room-for smart device


Scan the QR Code to join the meeting room.

JOIN

Open the Capture Board app on smart device to scan the QR code or open the software on laptop to join and start on sharing the content in real-time.

for PC/Laptop


Open the software on laptop, type in the Room ID to join and start on sharing the content in real-time.

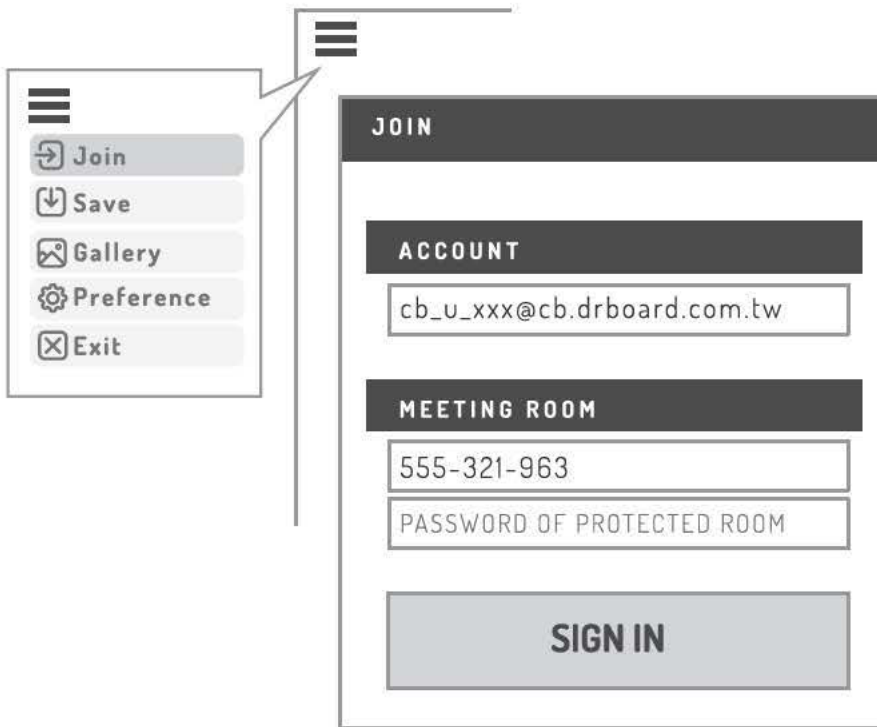

for SMART DEVICE

Open App and scanning the QR code or choosing an active room to join in the meeting room.


*Each meeting room can be join in with up to 10 smart devices (included server account).

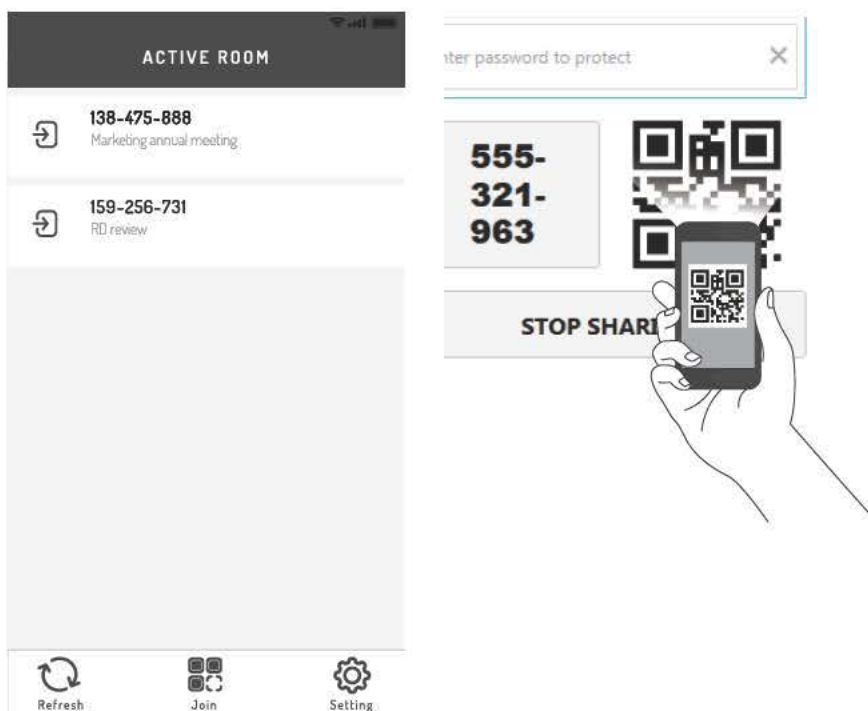

TROUBLESHOOTING

FORGET ACCOUNT/PASSWORD

In case of forgetting your account or password, please send the S/N behind Capture Board and your purchase location or dealer to our Customer Service e-mail: Ajita@drboard.com.tw. We will help you getting back your account info.

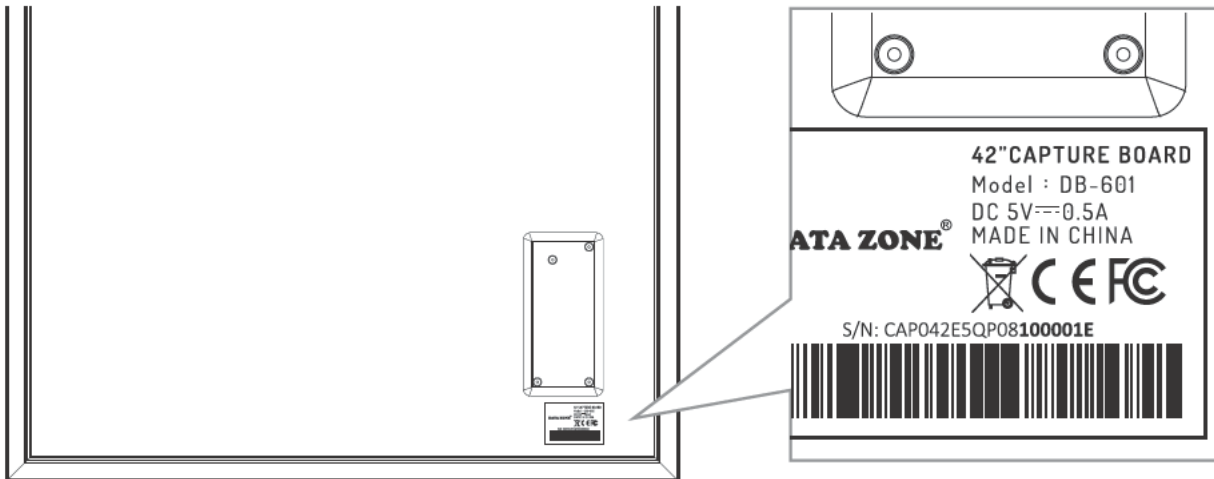

OUT-DATED SOFTWARE

You can update the software by visiting our website www.drboard.com.tw and download the latest version

PCBA REPLACEMENT

To replace broken PCBA, open the hatch located at the rear side of the board. Please use appropriate tools to open hatch. Pull out broken PCBA and plug in new one. For new PCBA, contact your local agent or distributor

NEW PEN/ERASER

Once the ink inside the pen is used up, contact your local agent or distributor to purchase for replacement.

BOARD SURFACE MAINTENANCE

Used typical dry erase white board cleanser to wipe and clean surface. Avoid using other chemicals or sharp objects to clean surface.

INTERNET CONNECTION

Ensure a stable internet connection for Server and Client devices. Unstable connection might cause lagging or clients un-able to receive information transmitted from the board.